
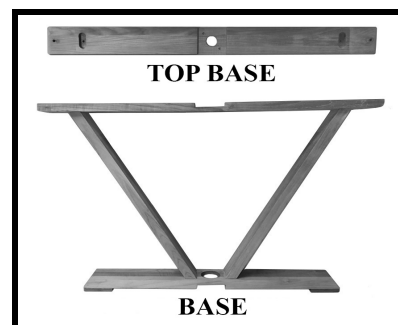
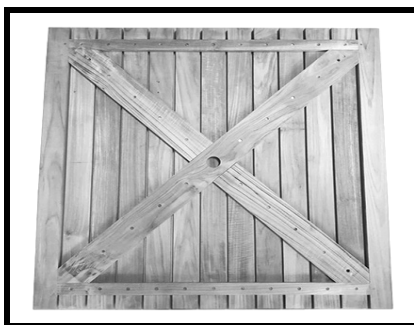



# KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE


## ASSEMBLY INSTRUCTIONS FOR THE AV-41

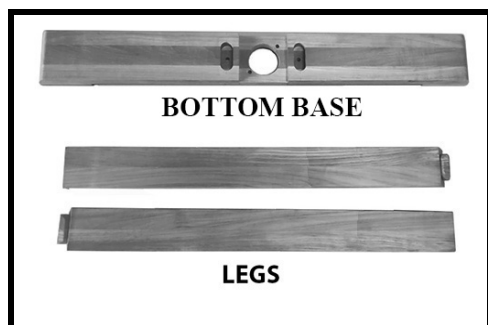

### TABLE TOP

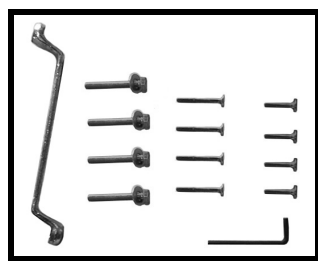

### HARDWARE

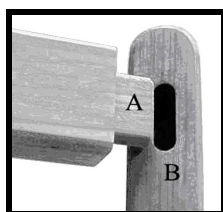

### \* NOTE

**A TENON**

**B MORTISE HOLE**



### STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.


### STEP-II

Stand **BASE** upside down carefully and install the **BOTTOM BASE** and **LEGS** as shown in the assembly photographs below. Bolts and components will be marked.

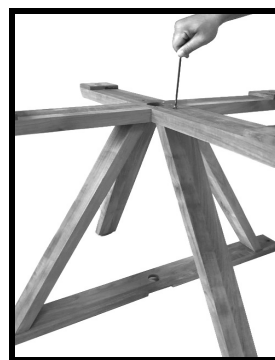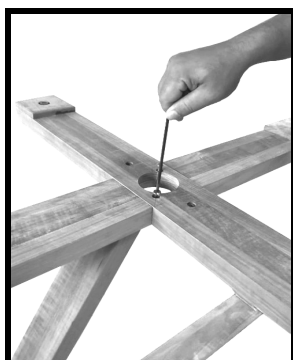


### STEP-III

Upright the BASE assembly and install the TOP BASE as shown in the assembly photographs below. Again, all bolts and components are marked to identify which hardware to use.

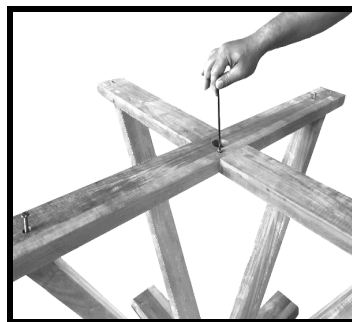

### STEP-IV:

Place TABLE TOP upside down on a clean, flat, soft surface. Install base as shown in the assembly photographs below. We suggest that two people upright the table. It is best to LIFT the table, ROTATE it and set it back down.

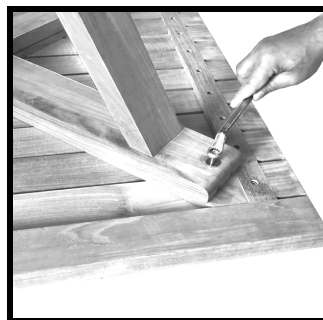

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*\*KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*

7200 Gateway Court, Manassas, Virginia 20109  
Phone: 703-361-7000, Fax: 703-361-7001