Kingsley-Bate

NT15 Nantucket Dining Chair Assembly Instructions



KINGSLEY – BATE

Fine Garden Furniture
ASSEMBLY INSTRUCTIONS FOR THE NT 15/25



RACK



SEAT



 
SEAI



RIGHT END FRAME



LEFT END FRAME



* NOTE A TENON B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. NOTE: During assembly of furniture please match joints with the corresponding letter or numbers.



STEP-II

Fit the BACK LEG STRETCHE R, BACK STRETCHER, and SEAT into the RIGHT END FRAM E mortise holes. If necessary, gently rock the BACK LEG S TTTRETCHER while pushing the tenon into the mortise hole until the joint fits snugly together. Make sure that the numbered tenons corre spond with the numbered mortise holes.







STEP-III

Carefully fit the remaining LEFT END FRAME mortise holes over all exposed tenons. Using a rubber mallet or a regular

hammer with the sanding block between the hammer and the wood, gently drive all the mortise holes onto the tenons until all joints fit snugly together. Slide BACK FRAME into position using the exposed dowels in the SEAT FRAME as a guide.



 
STEP-IV

Using a proper screw driver, insert and secure all knock down bolts as shown on the assembly diagram.









STEP-V

Carefully hammer dowels into LEFT and RIGHT END FRAMES. Use the sanding block between the hammer and the dowels to prevent marring of the wood.

NOTE: 1" DOWEL USED FOR PLUGGING END FRAMES



STEP-VI

Carefully drive the brass pins into the LEF T and RIGHT END FRAMES. Once flush with t he wood, use the 1" plugs to cover the brass pins. Again, use the sanding block between the hammer and the wood to prevent any marring of the wood.





NOTE: DO NOT FORCE THE DOWELS. ANY EXCESS CAN EASILY BE SANDED AWAY.

STEP-VII

Insert screws into pre-dr illed holes of the SEAT FRAME and the BACK STRETCHER as shown on

the assembly diagram. Do not hammer in the screws, drive them in with a proper screw driver.





STEP-VIII

Carefully hammer the plugs into the BACK STRETCHER to cover the screw holes. Again, if the plugs are not completely flush, just sand away the excess with the sanding block provided.

NOTE: ½" DOWEL USED FOR COVERING SCREW HOLE IN BACK STRETCHER.

IF YOU HAVE ANY QUESTION REGARDING ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT A KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.

> 7200 Gateway Court, Manassas, Virginia 20109 Phone. 703-361-7000, Fax. 703-361-7001