

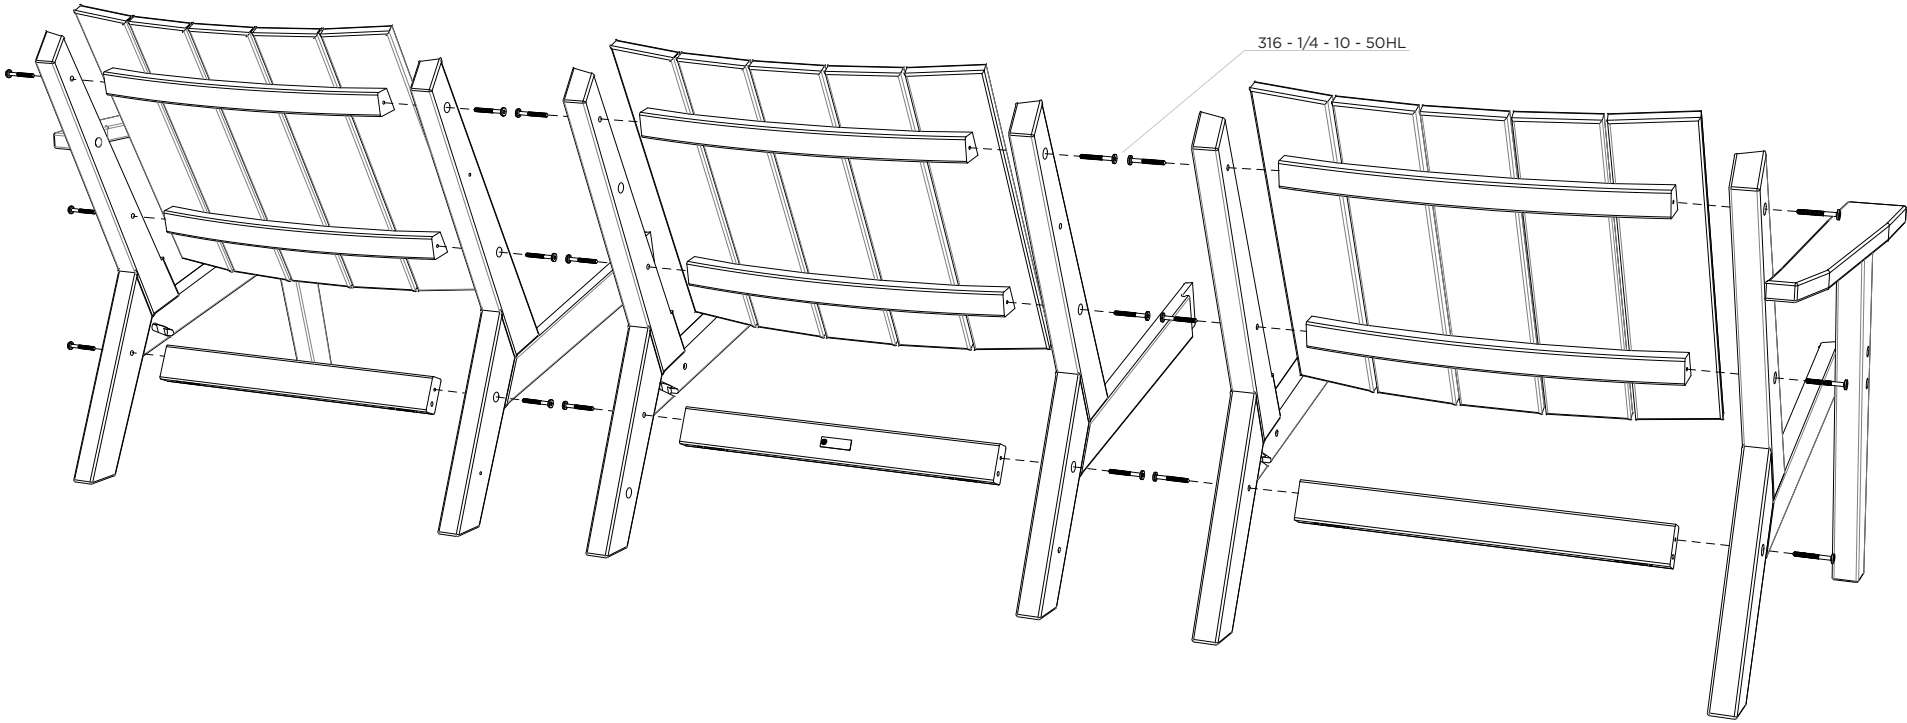
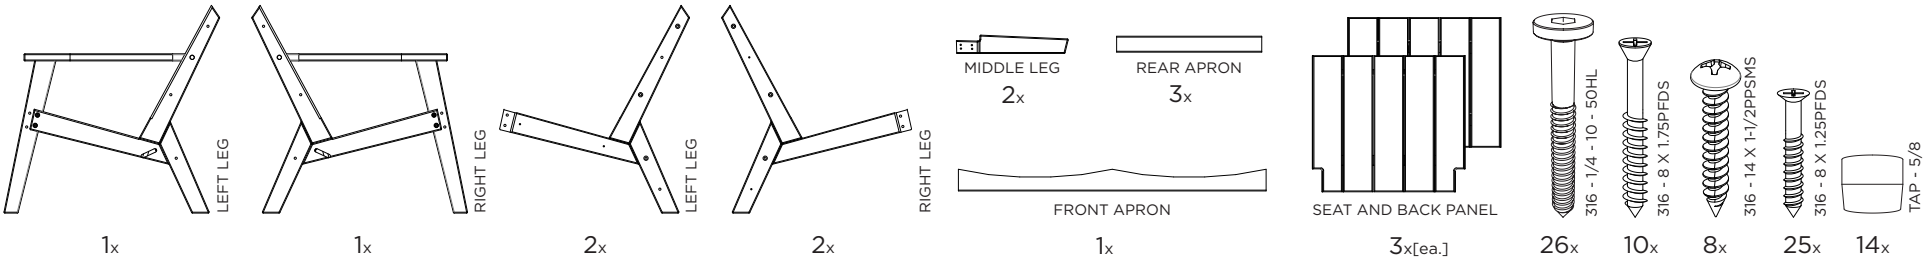




PLEASE READ INSTRUCTIONS COMPLETELY; Ensure all parts and hardware in the Parts List below are included prior to assembly.
WARRANTY QUESTIONS PLEASE CALL: 800-809-3114 OR EMAIL: sales@seasidecasual.com

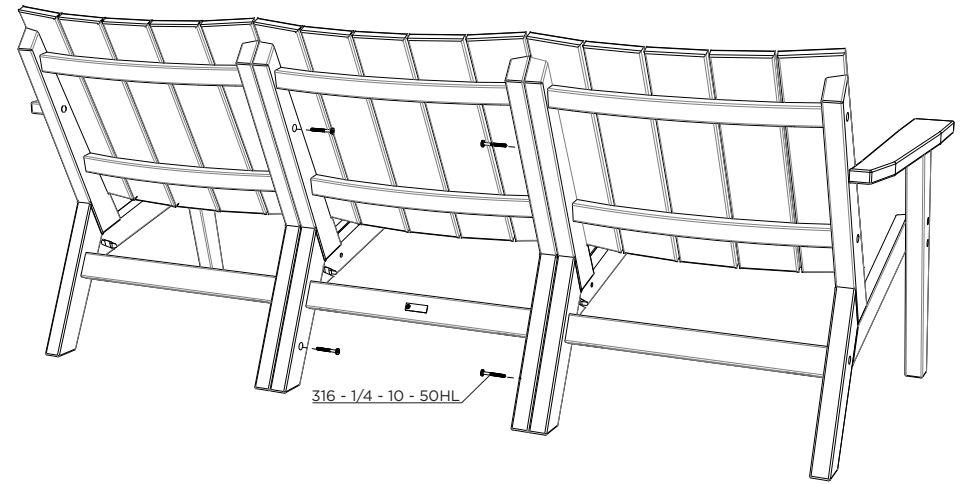


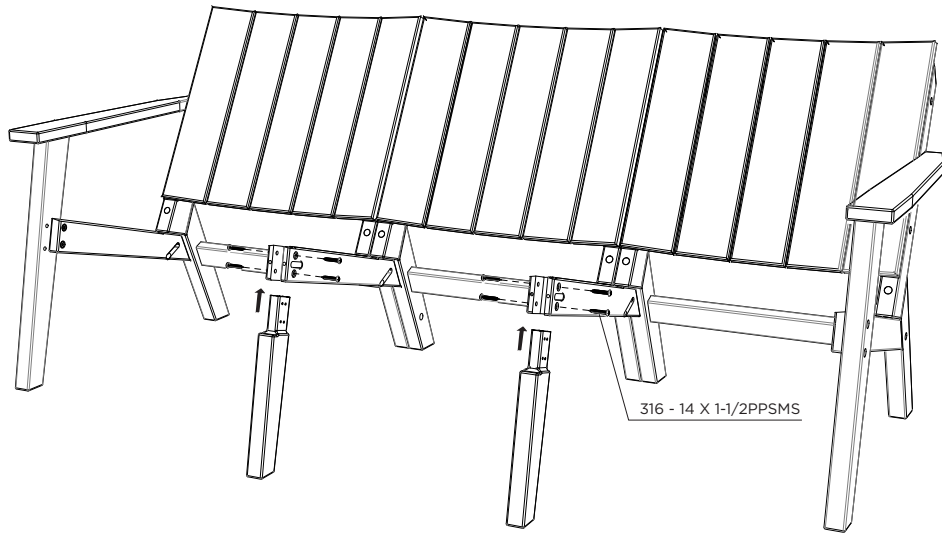


2
4

3
5

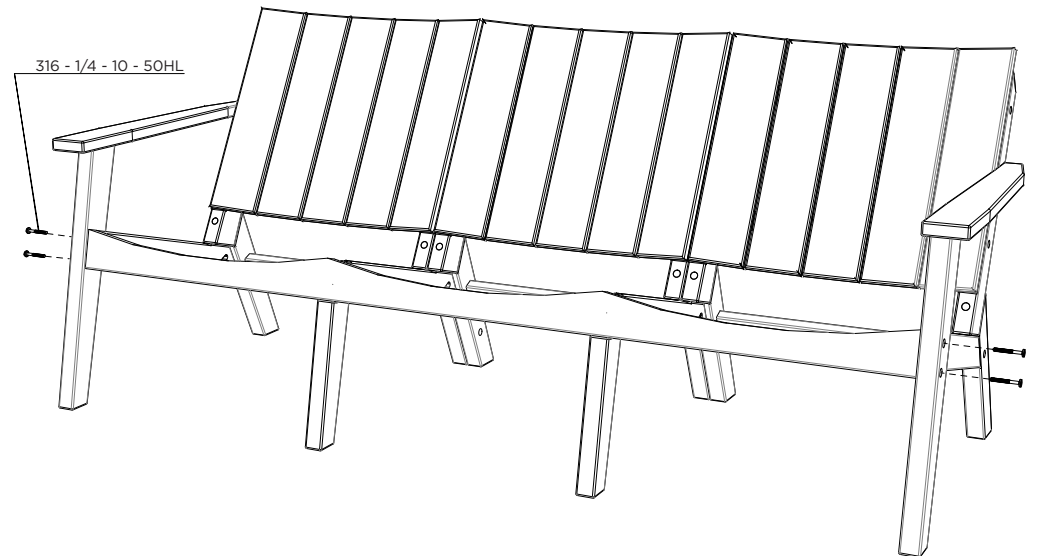
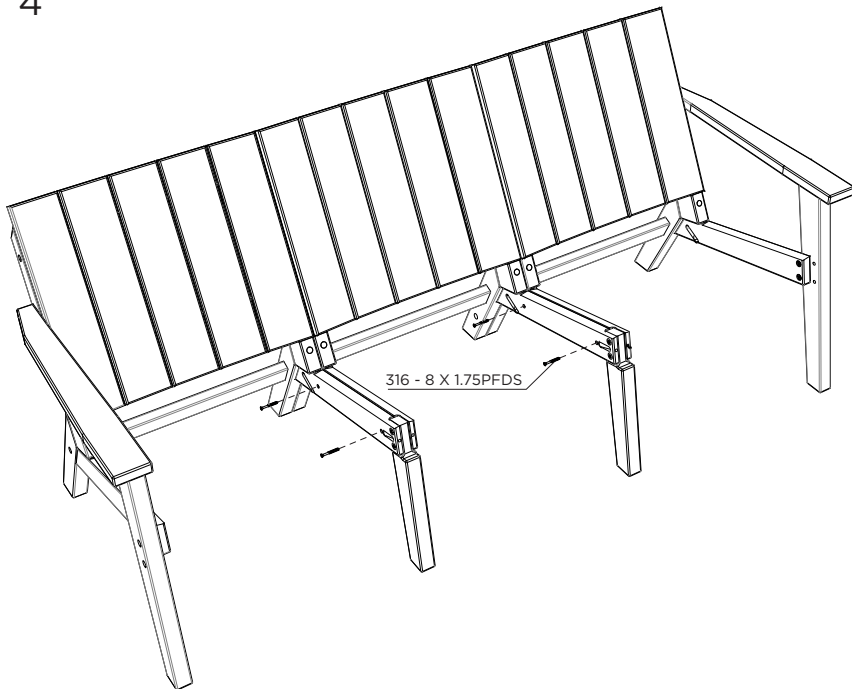


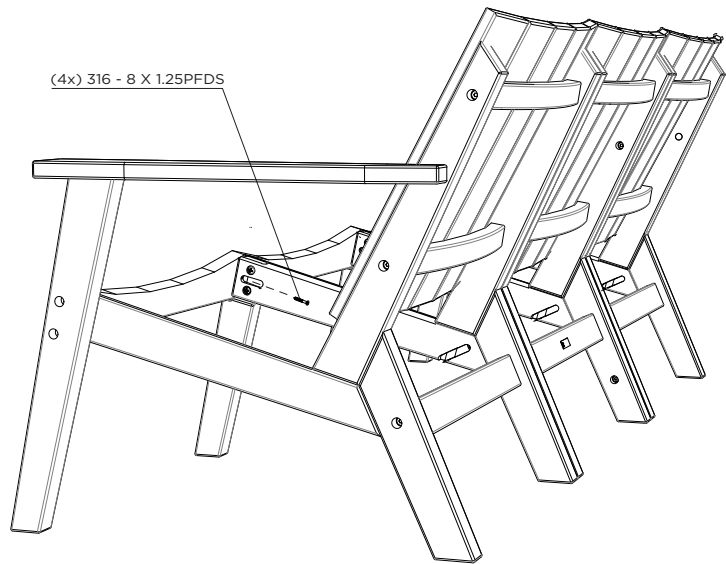

6
8

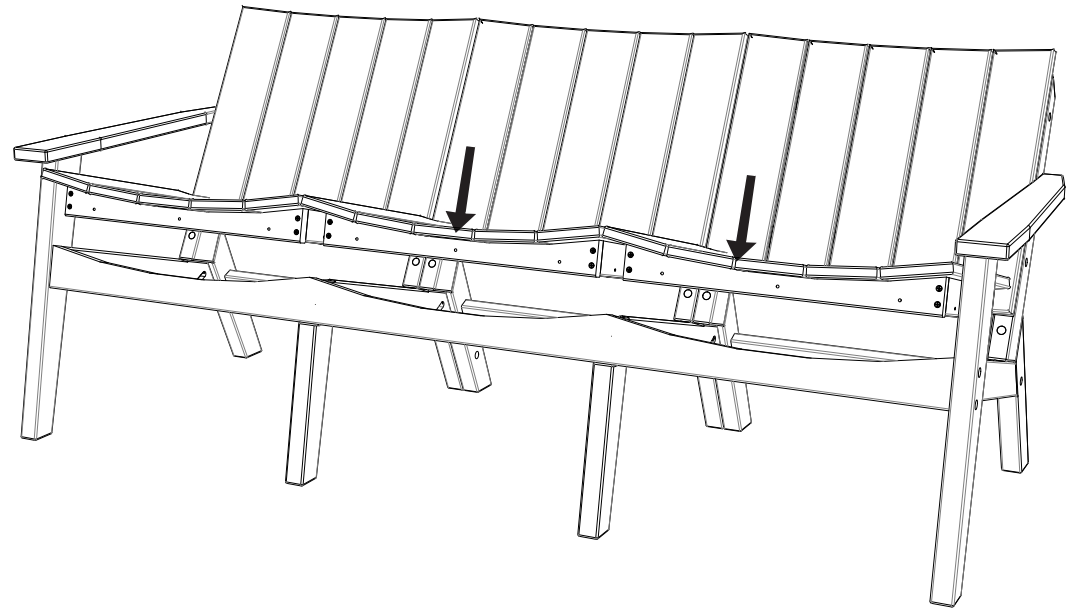

7
9

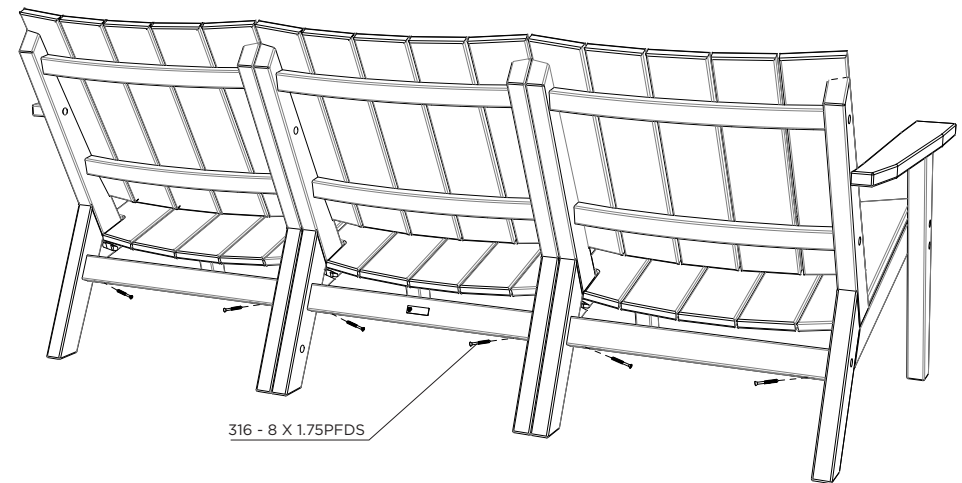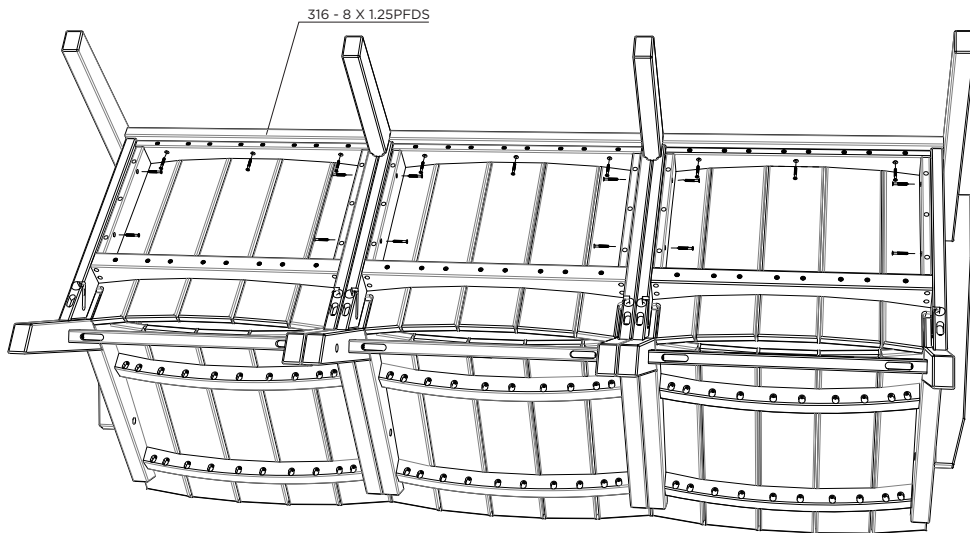

TIGHTEN ALL CONNECTIONS. **AVOID OVER-TIGHTENING**; DOING SO CAN CAUSE DAMAGE TO THE PRODUCT. INSERT TAPS FLUSH WITH FRAME.

[293] MAD CHAT SOFA