



Kingsley-Bate

NT18 Nantucket Bar Chair
Assembly Instructions

authenTEAK^{LLC}
Outdoor Living

KINGSLEY-BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE NT-18



BACK



SEAT

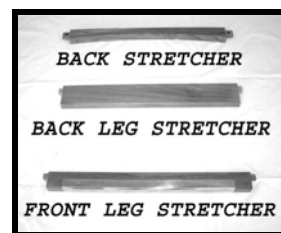

RIGHT END FRAME




LEFT END FRAME

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers.

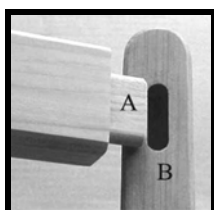

* NOTE:

A TENON

B MORTISE HOLE

STEP-II

Fit the BACK STRETCHER, BACK LEG STRETCHER, FRONT LEG STRETCHER and SEAT into the RIGHT END FRAME mortise holes.

If necessary, gently rock the PARTS while pushing the tenons into the mortise holes until all joints fit snugly together. Make sure that the numbered tenons correspond with the numbered mortise holes.



STEP-III

Carefully fit the remaining LEFT END FRAME mortise holes over all exposed tenons. If necessary you may use a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive all the

mortise holes onto the tenons until joints fit snugly together. Holding the END FRAMES tight against the component parts, carefully **lift** the chair and place it upright on the ground. Slide BACK FRAME into position using the exposed dowels in the SEAT as a guide.



STEP-IV

Using a proper screw driver, insert and secure all knock down bolts as shown on the assembly photographs.



STEP-V

Carefully hammer dowels in to LEFT and RIGHT END FRAMES. Use the sanding block between the hammer and dowels to prevent marring of the wood. BACK can be pushed slightly forward for better clearance when swinging hammer.

***NOTE: 1" DOWEL USED FOR PLUGGING END FRAMES.**



STEP-VI

Carefully drive the brass pins into the LEFT and RIGHT END FRAMES. Once flush with the wood, use the 1" plugs to cover the brass pins. Again, use the sanding block between the hammer and the wood to prevent any marring of the wood.

***NOTE: DO NOT FORCE THE DOWELS. ANY EXCESS CAN EASILY BE SANDED AWAY.**

STEP-VII

Secure screws into pre-drilled holes of the SEAT and the BACK as shown in assembly pictures, insert screws through BACK STRETCHER and into the BACK with a proper hand held screwdriver.



***NOTE : ½" DOWEL USED FOR COVERING SCREW HOLE IN BACK STRETCHER.**

STEP-VIII

Carefully hammer the plugs into the BACK STRETCHER to cover the screw holes. Again, if the plugs are not completely flush, just sand away the excess with the sanding block provided.



IF YOU HAVE ANY QUESTION REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*

Kingsley-Bate


TR37 Essex 36" Round Bar Table Assembly Instructions



KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE TR - 37

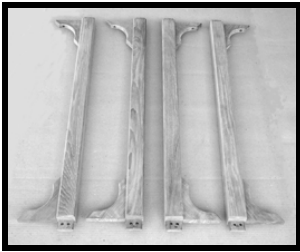

LEGS



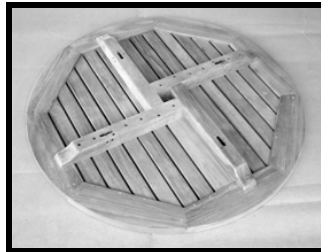


TABLE TOP

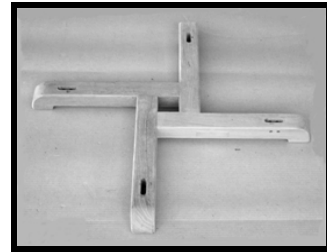

BASE

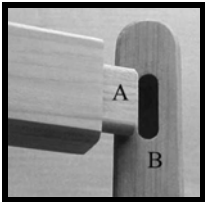

STEP-I


Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

*NOTE:

A TENON

B MORTISE HOLE

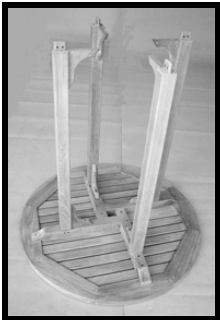

STEP-II

Place the TABLE TOP face down and carefully insert the LEG tenons into their respective mortise holes on the underside of the TABLE TOP. Tenons of the LEGS will be stamped with a number or letter to correspond with their respective mortise holes on the BASE.



STEP-III

Carefully take the BASE and insert the LEG tenons into their respective mortise holes. Again, please be sure to line up the stamped numbers or letters. Using a rubber mallet or a regular hammer with a wood block between the hammer and the wood, drive the tenons and mortise holes together until all the joints fit snugly together. Drive the wooden dowels through

the tenons of the LEGS using direct sharp blows from a hammer. To avoid marring the wood please use a block of wood between the dowel head and the hammer head for the last few blows. Do not force dowels; any excess can easily be sanded away.



STEP-IV

Drive the remaining dowels into the BASE using the same care used in STEP III. Again, do not force the dowels. Any excess can easily be sanded away.



STEP-V

Insert all screws into pre-drilled holes using a proper screw driver as shown in the diagram.



STEP-VI

Place the table upright and insert all screws into pre-drilled holes using a proper screw driver as shown in the diagram. Cover the screw holes with the teak plugs provided. Tap them in carefully with a hammer.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*