

We recommend two people be on hand for this assembly

Tools required :

- 4mm hex key (included)


IKAT PRIVACY SCREEN

ASSEMBLY INSTRUCTIONS


!! Important
Do not use power tools on this assembly.
Use the supplied manual hex key.




- ① Attach the vertical legs to the assembly by lining up the corresponding holes on both components. Then, secure the two together using the supplied M6x20mm bolts.

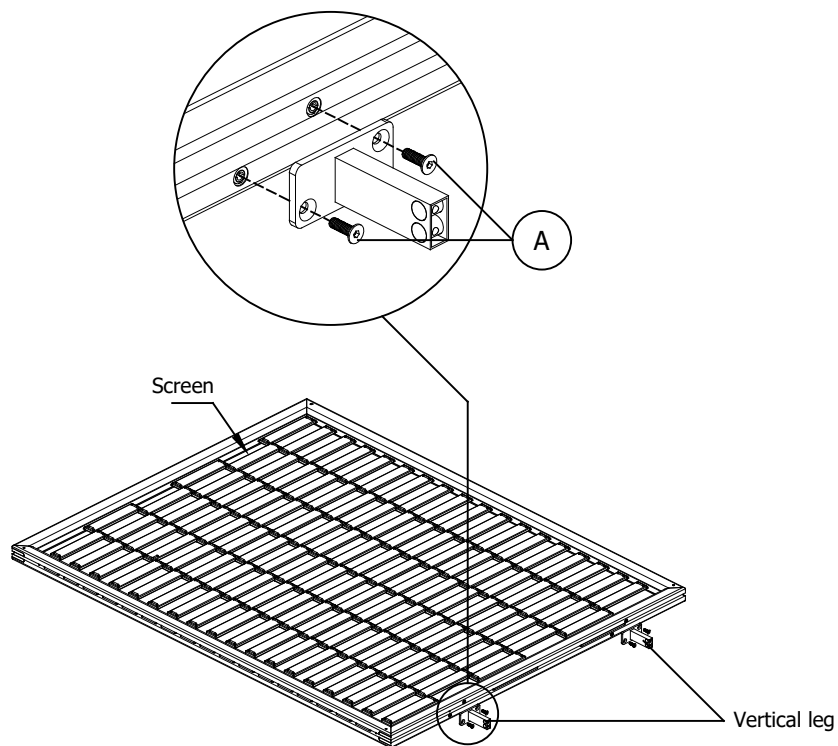


- ② Attach the base plates to the assembly from step 1 by lining up the holes on the vertical legs with the corresponding holes in the base plates. Then, secure them using the supplied M6x25mm bolts.

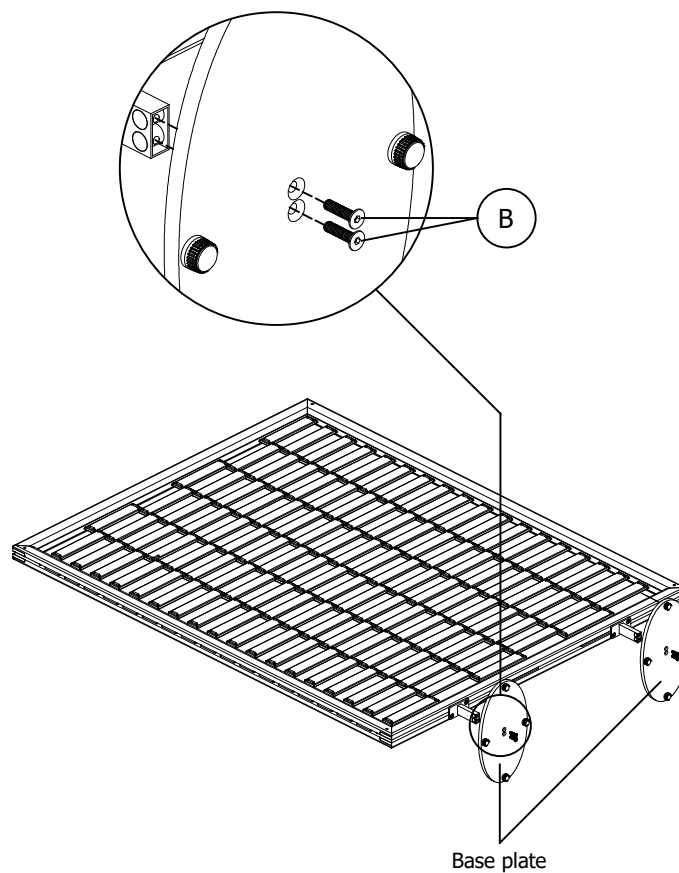

- ③ Turn the screen right-side-up.

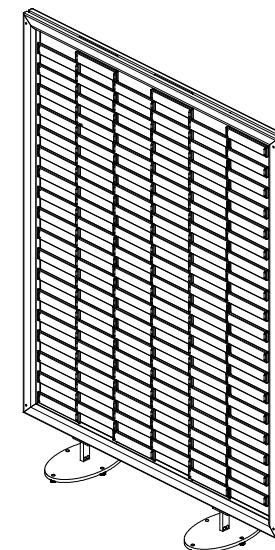


A BOLT M6x20mm

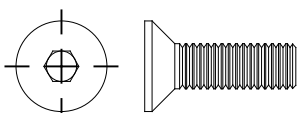

4 pcs

B BOLT M6x25mm



4 pcs