

Tools required :
- 4mm hex key (included)
- 5mm hex key (included)


KRONA LOUNGE CHAIR

ASSEMBLY INSTRUCTIONS



!! Important
Do not use power tools on this assembly.
Use the supplied manual hex key.




- ① Attach the backrest to the seat by lining up the alu pipes on the backrest with the corresponding holes on the seat assembly. Then, loosely secure the two together using the supplied M6x50mm JCBC bolts.

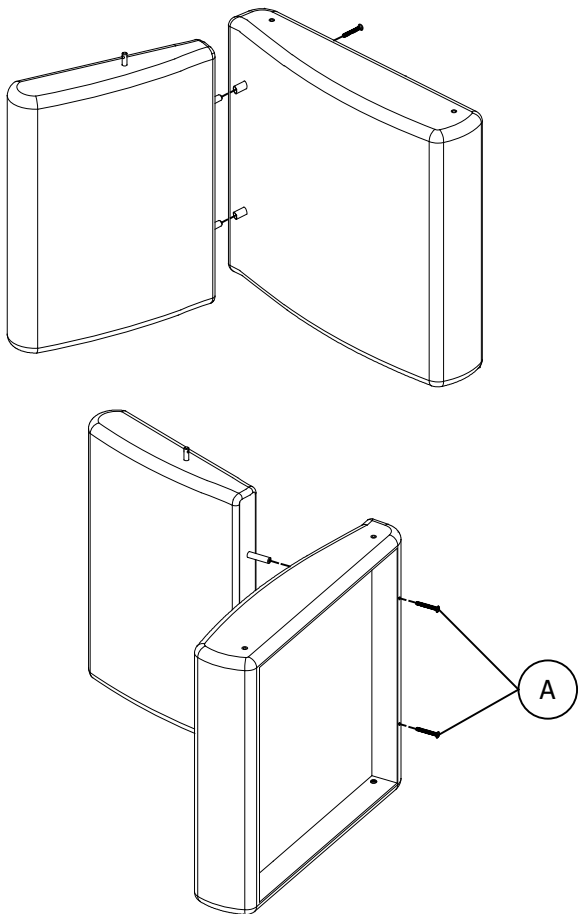


- ② Line up the the side frame with the seat and the aluminum rod on the backrest.
- Loosely secure the connection between the side frame assembly and the rod on the backrest using the supplid M6x20mm bolts.
- Loosely secure the connection between the side frame assembly and the seat using the supplied M6x50mm socket head bolts and flat washers.
- ③ Repeat step 2 to assemble the oppossing side frame. Then, fully tighten all the bolts.

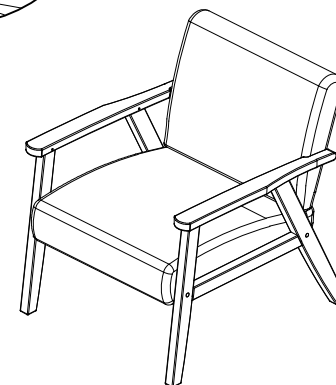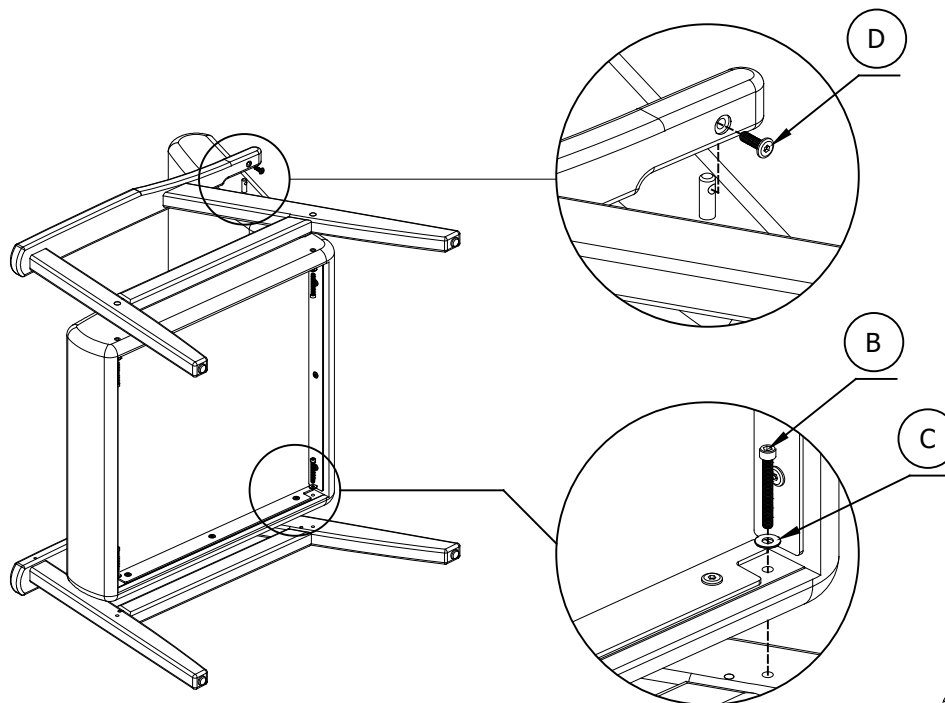


A JCBC BOLT M6x50mm

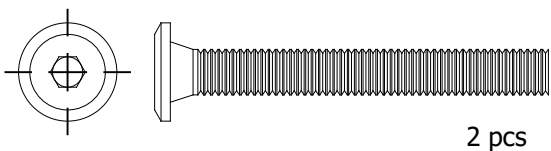

B SOCKET HEAD BOLT M6x50mm

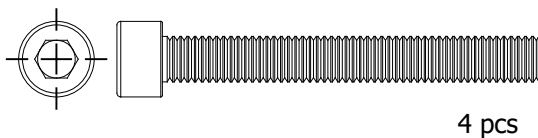

C FLAT WASHER

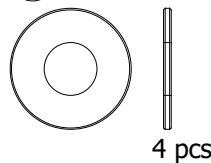

D BOLT M6x20mm

