

We recommend two people be on hand for this assembly

Tools required :

- 4mm hex key (included)
- 5mm hex key (included)

Vorso ALU COUNTER HEIGHT TABLE 59x31.5in

ASSEMBLY INSTRUCTIONS

!! Important
Do not use power tools for this assembly.
Use the supplied manual hex key.




- 1 Use the carton as a protective work surface by flattening out the sides and ends.
- 2 Pair the legs to the table top assembly by grouping the letter stickers applied on the legs and table top assembly.
- 3 Line up the studs on the legs with the holes on the bottom rails, and secure them together using the supplied M6x10mm bolts.


- Do not fully tighten the bolts, instead secure them loosely in place with two turns only.

- 4 a. Secure the legs loosely in place to the table top assembly using the supplied M8x45mm bolts, flat washers and spring washers. Ensure the flat and spring washers are in the correct position. Flat washer should be nearest to the frame, while spring washer should be nearest to the bolt.
b. Tighten the M6x10mm bolts fully, followed by tightening the M8x45mm bolts.


- 5 Remove the stickers labelled A, B, C, and D.

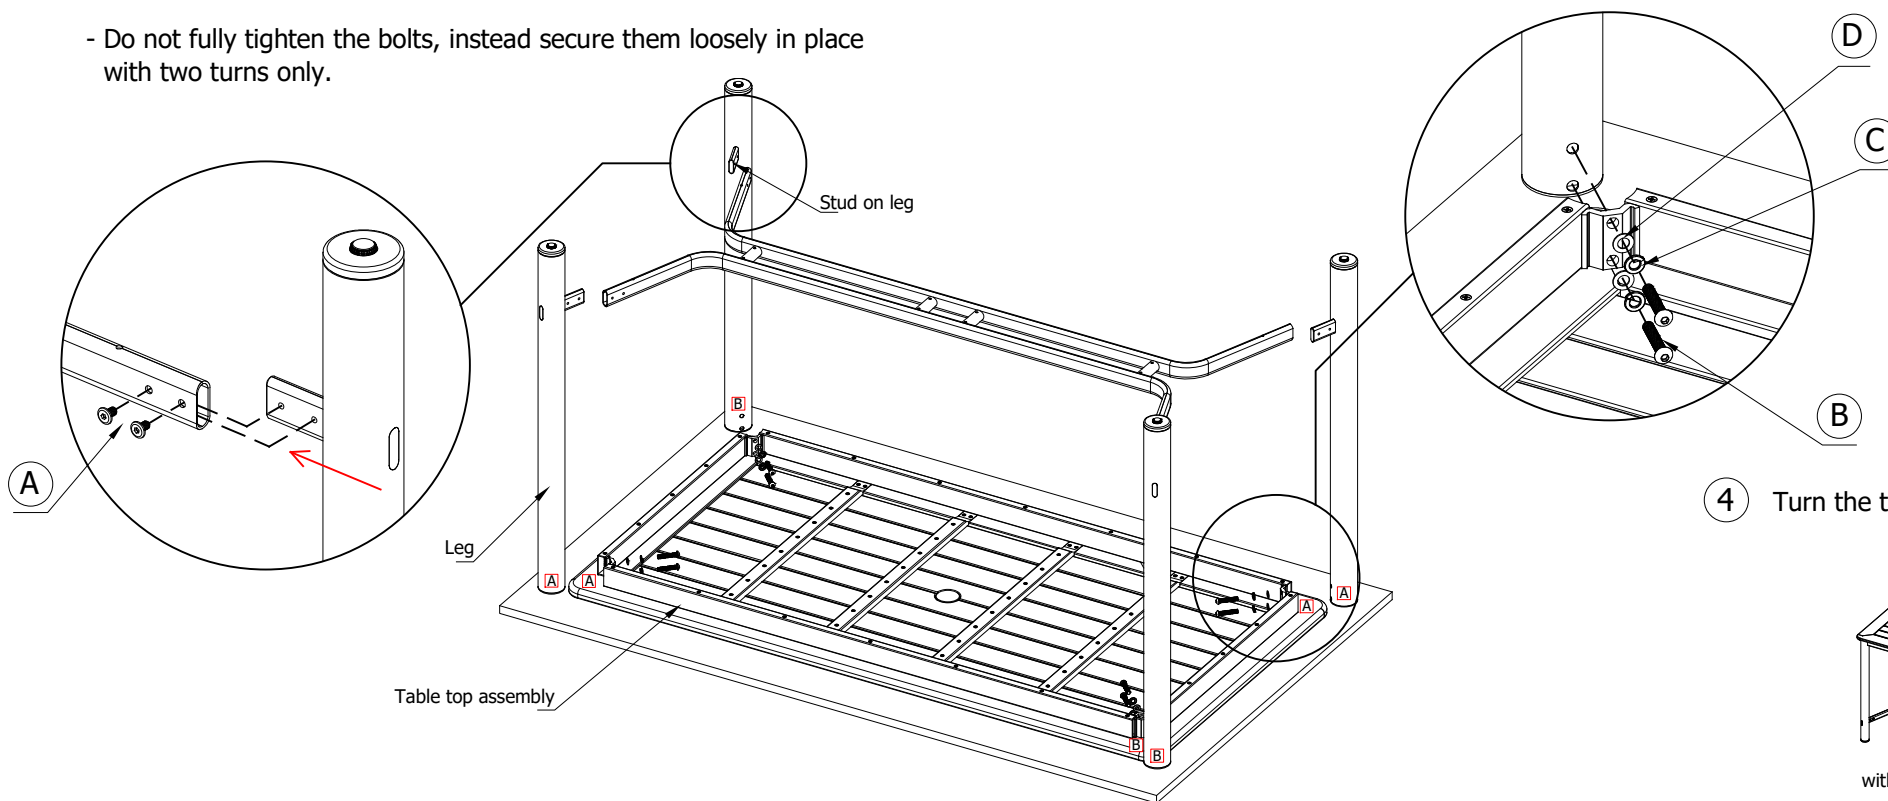

- 4 Turn the table right-side-up.

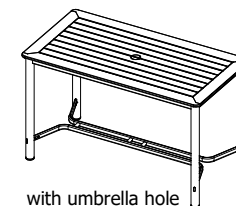


with umbrella hole

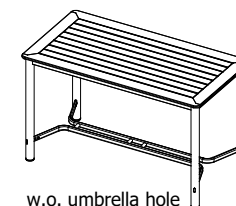


w.o. umbrella hole

A BOLT M6x10mm

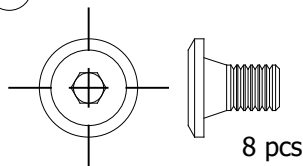


8 pcs

B BOLT M8x45mm

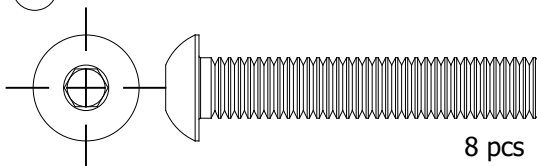


8 pcs

C SPRING WASHER M8

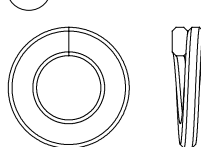

8 pcs

D FLAT WASHER M8

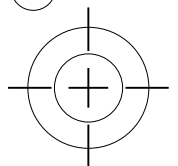

8 pcs