





wherever you are

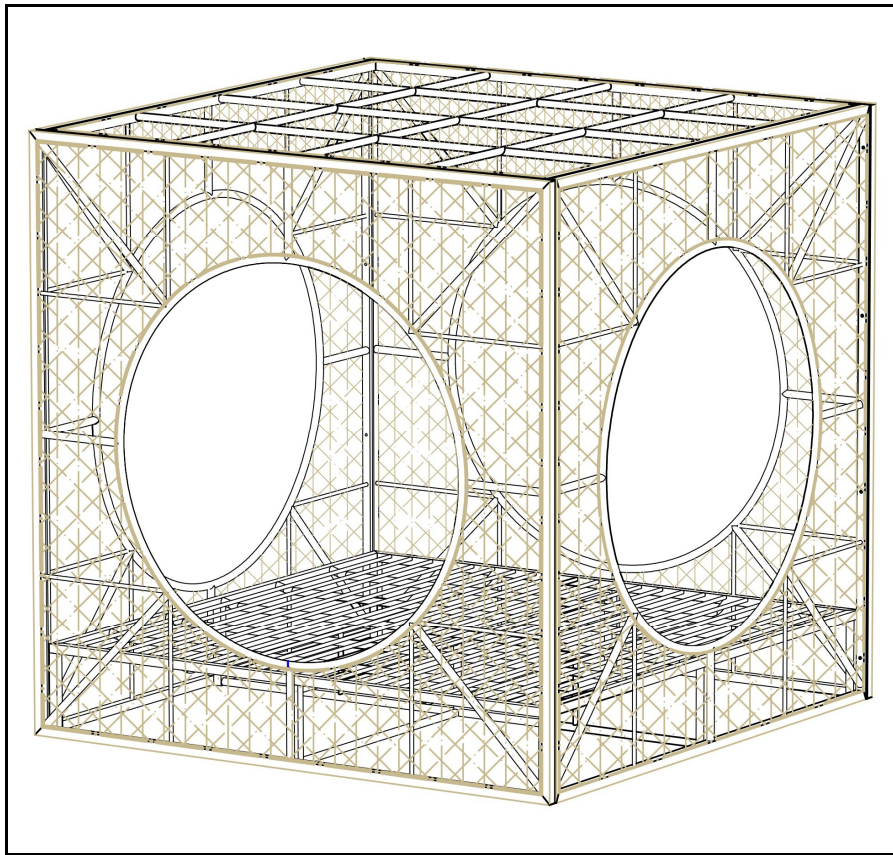



ASSEMBLING INSTRUCTION

CUBE DAYBED


PARTS :

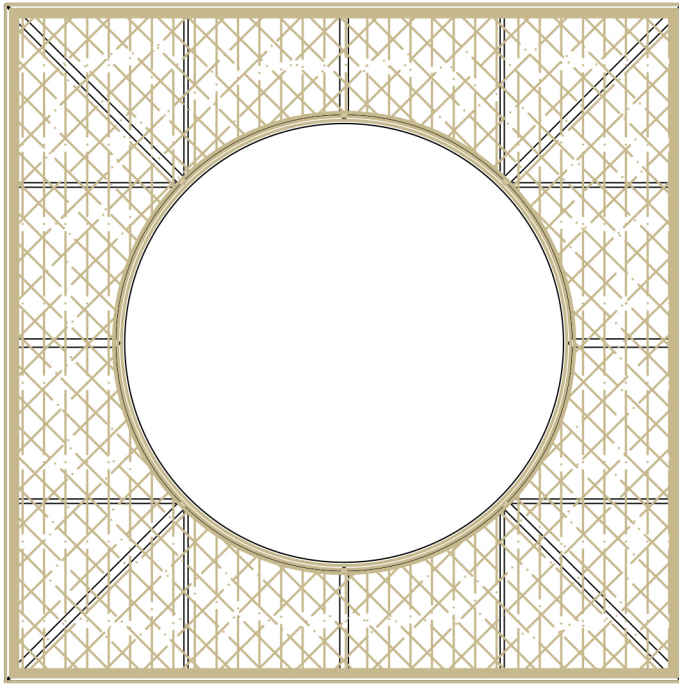


Front Panel and Back Panel
(2 Pcs)

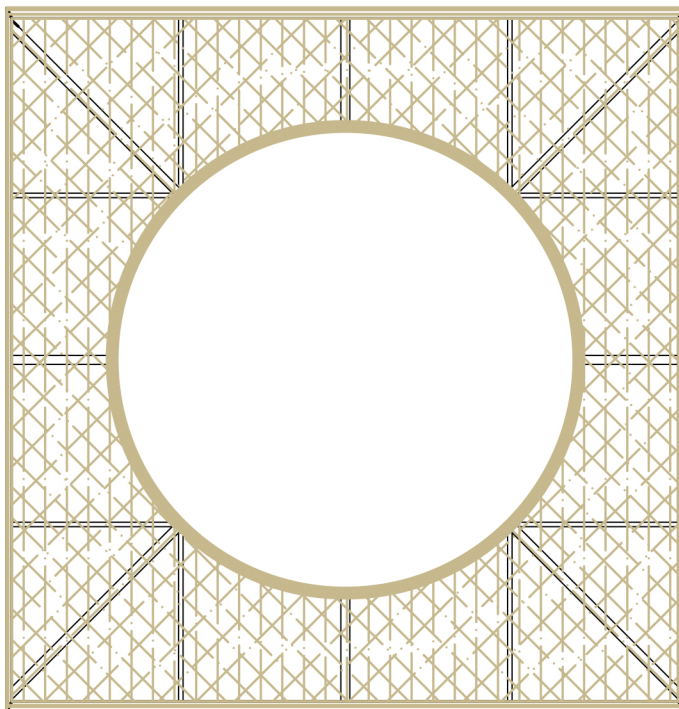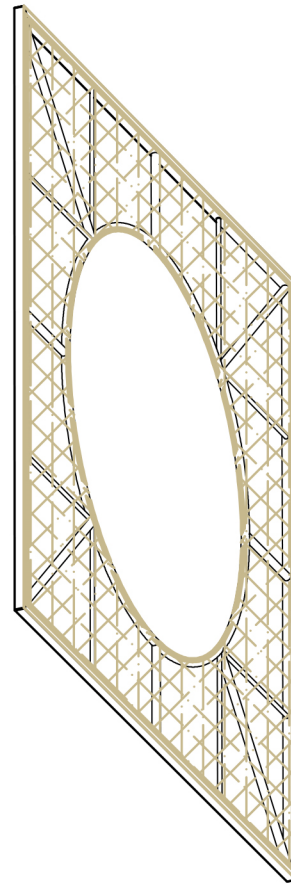



Side Panel - Left & Right
(2 Pcs)

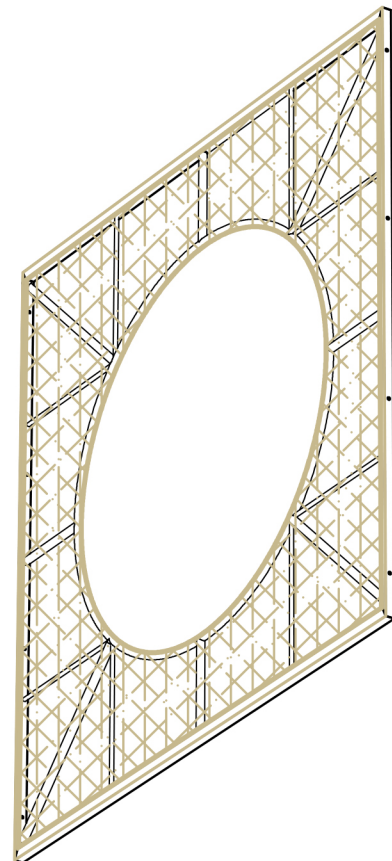

PARTS :

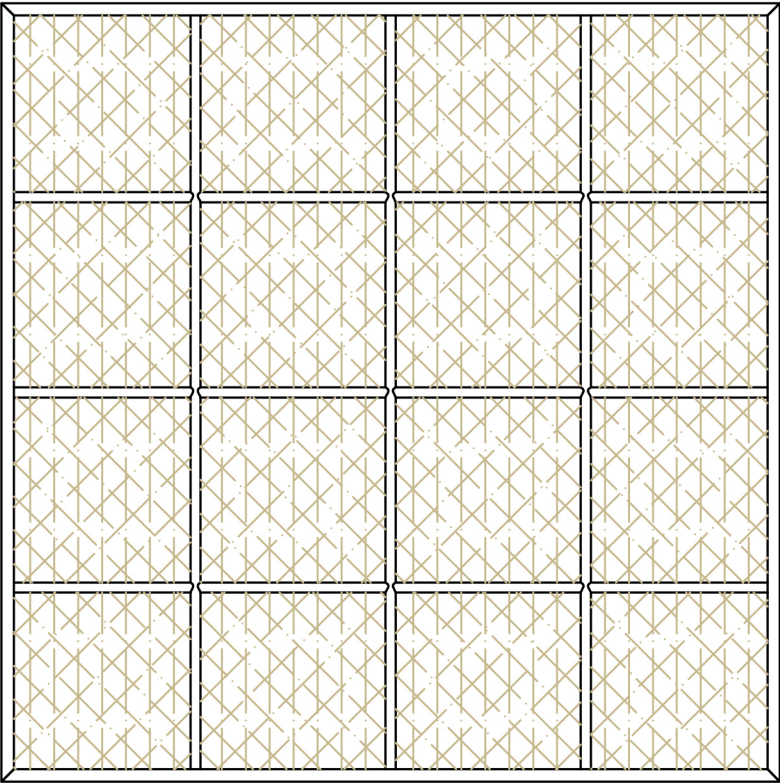


Top Panel 1 Pc

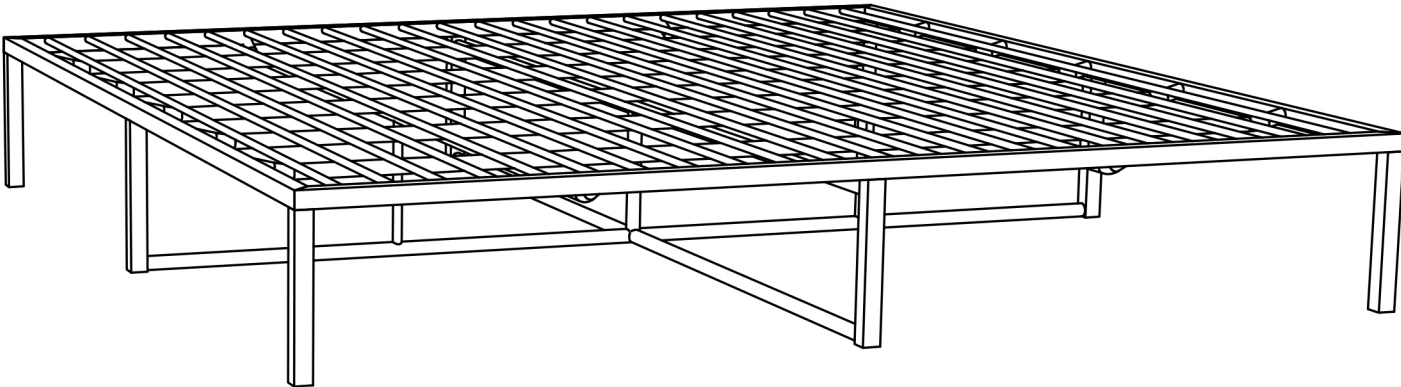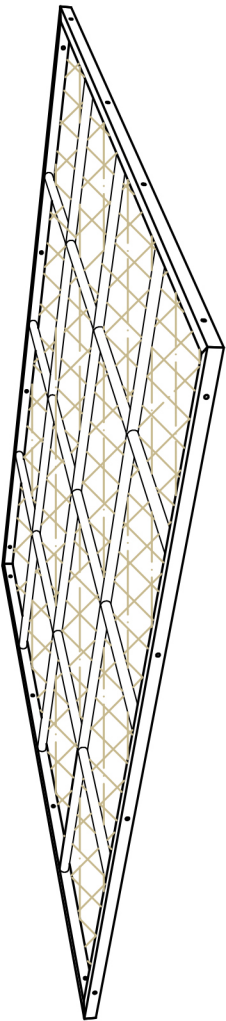


PLATFORM 1 Unit


HARDWARES :

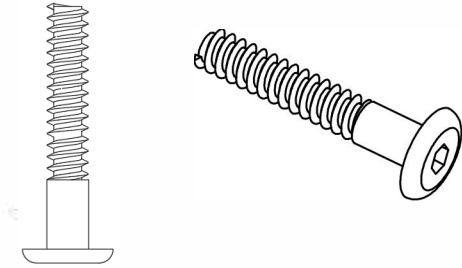





1. BOLT JCBC M6 X 45
(16 Pcs) For Side Panels

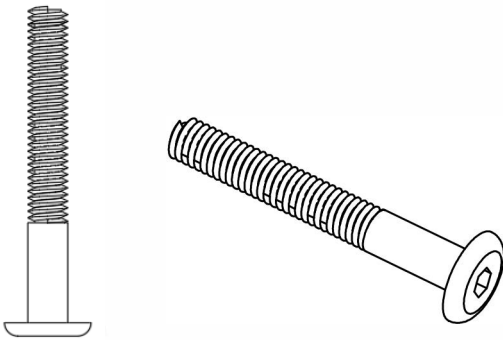


2. BOLT JCBC M6 X 60
(16 Pcs) For Top Panel

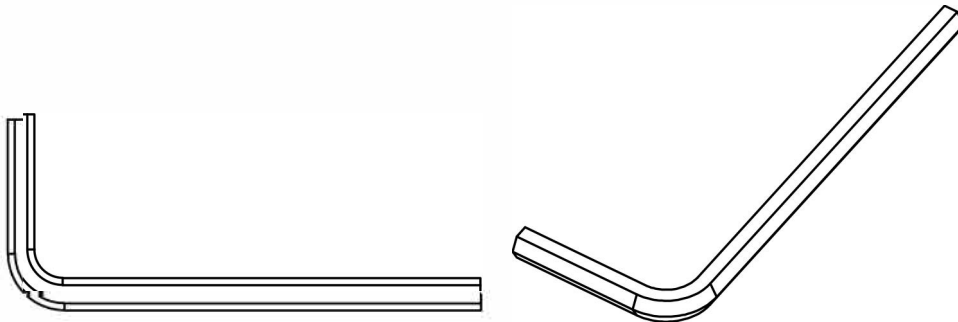

3. Allen Key L4 (1 Pc)

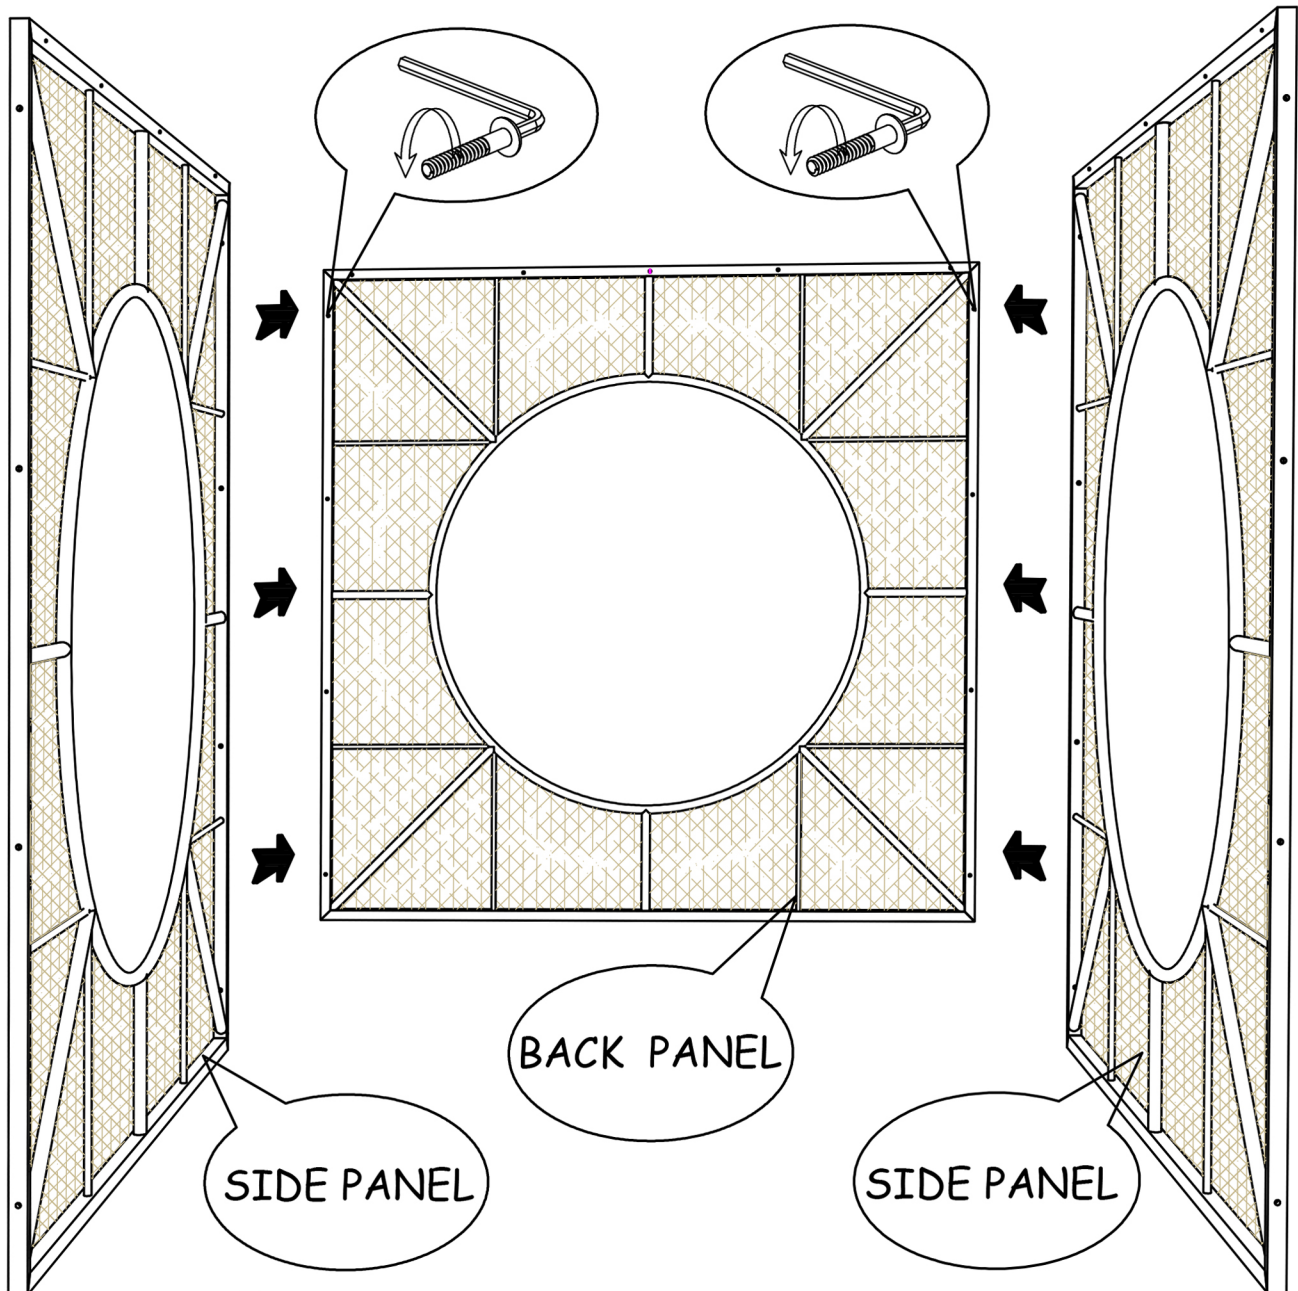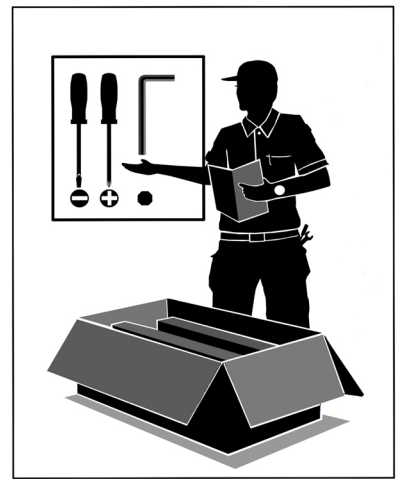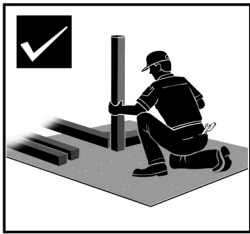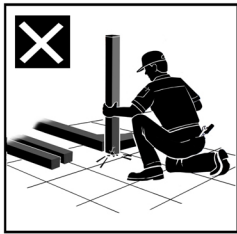


Assemble Side panels
(Left or Right) to Back Panel with
Bolt No.1 (JCBC M6 x 35)

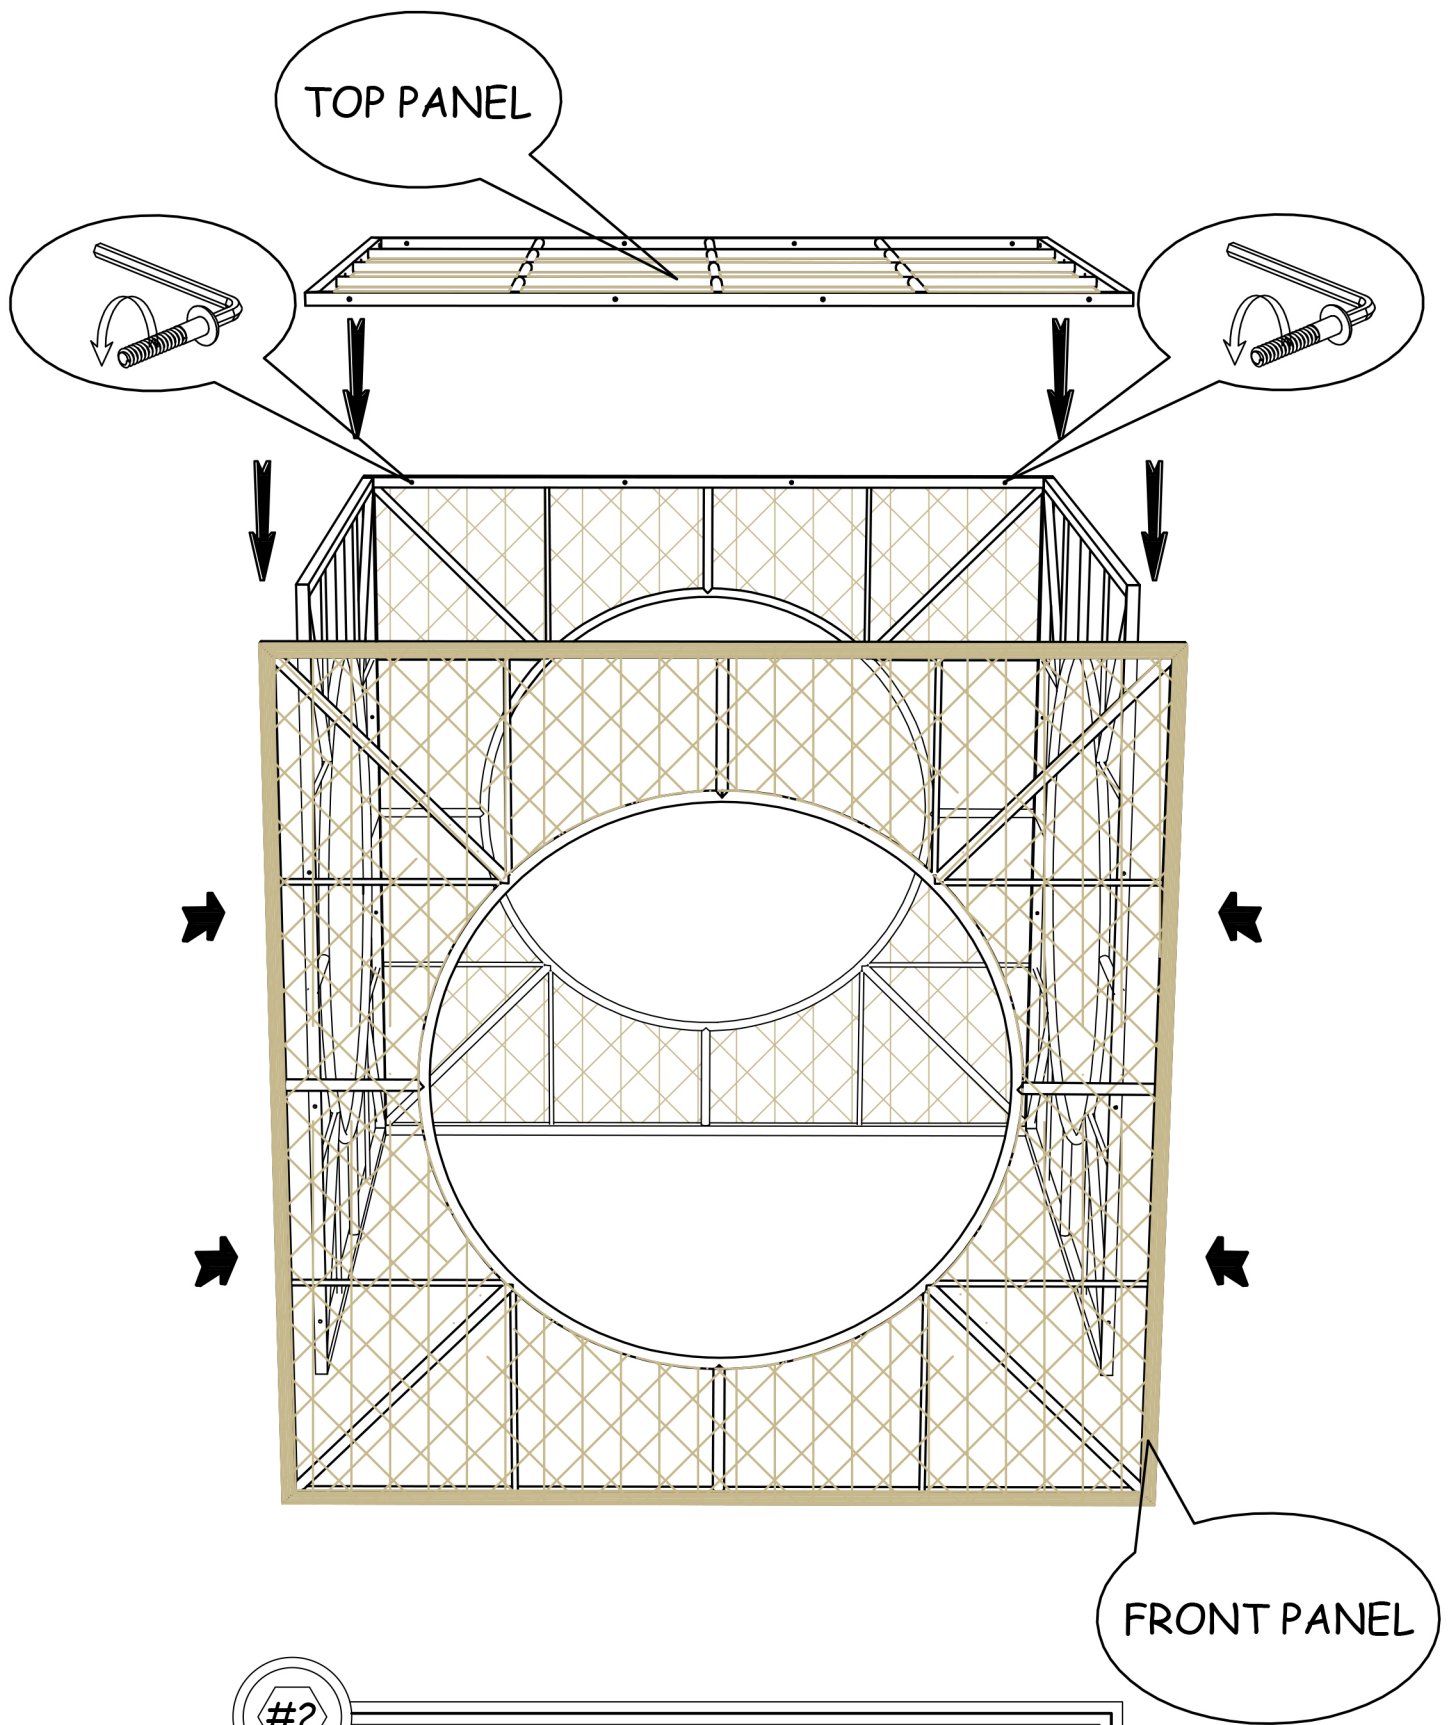

#2

Assemble Front Panel with Bolt No.1
then assemble the Top Panel with
Bolt No.2 (JCBC M6 x 45)

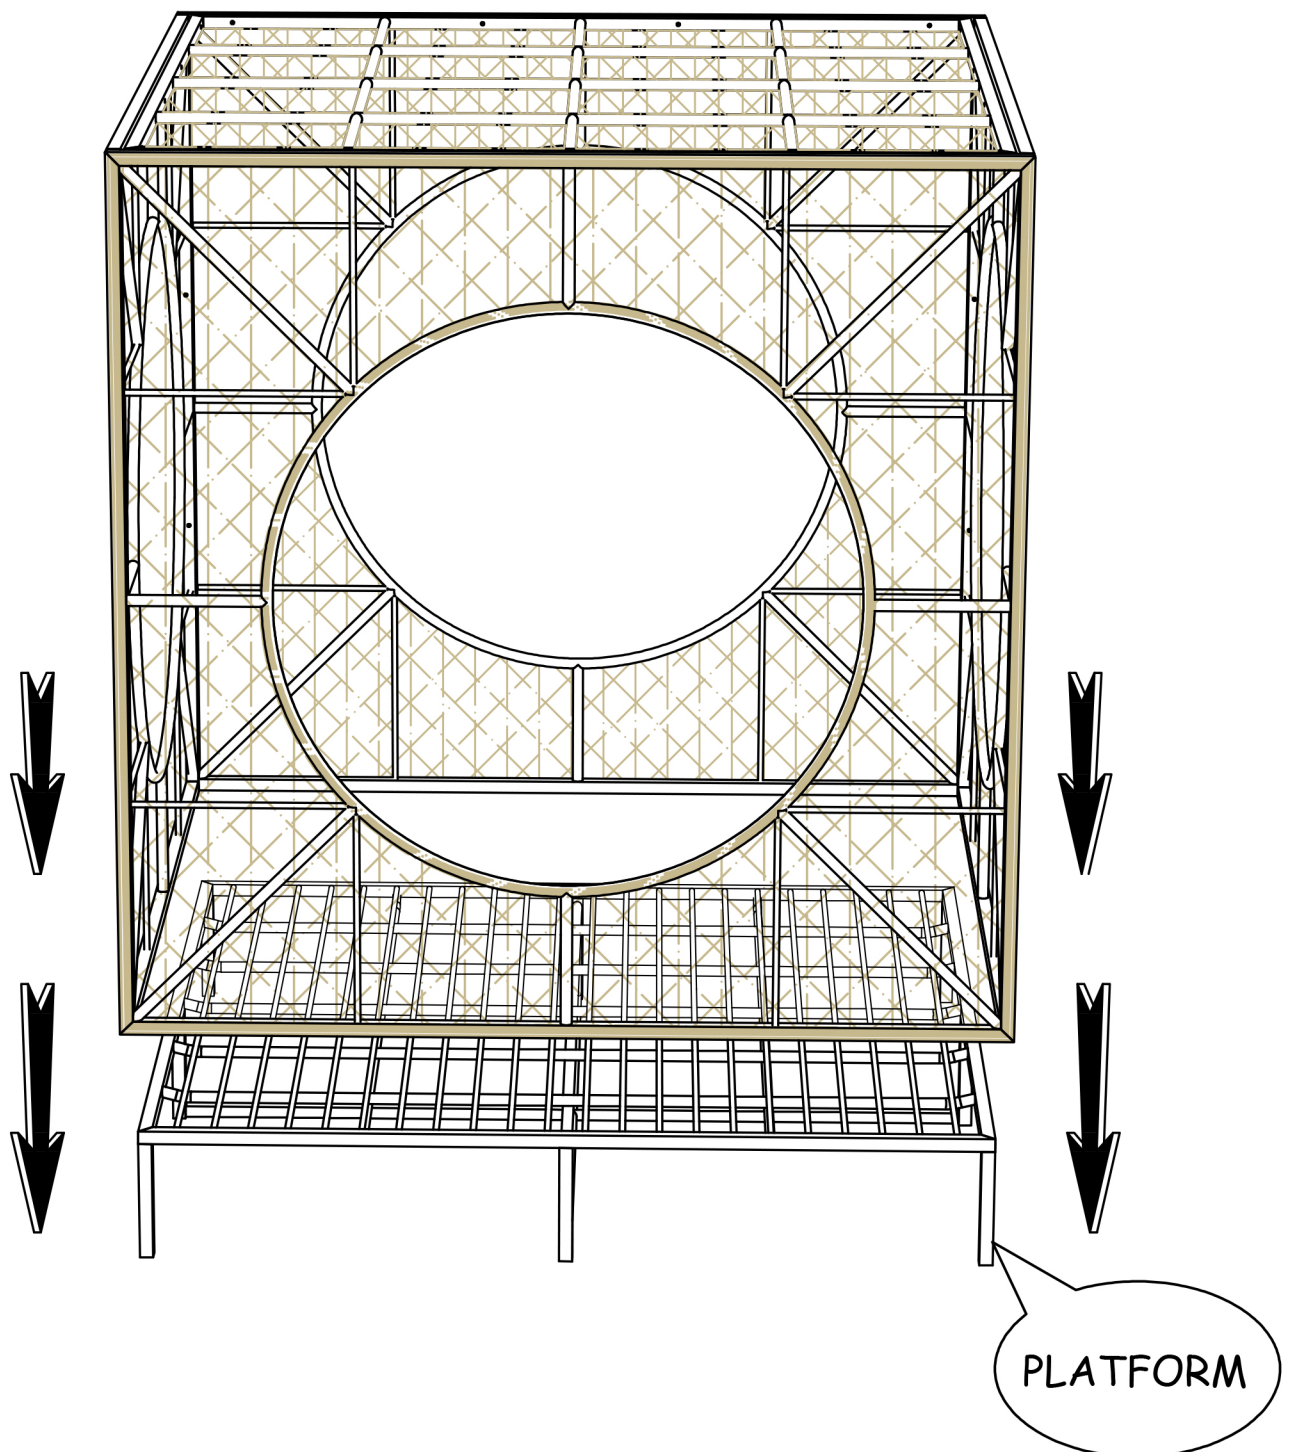

#3

Prepare the Platform on the Floor
then put all the panels (*After fix all
Bolts*) To the Platform (Finish)

