




INSTALLATION INSTRUCTIONS

OCEAN MASTER MAX BOLERO

STEP 1:

CONNECT ALL RIBS FROM RIB SET B TO LOWER LEVEL ON UPPER HUB.
(DETAIL A)

DO NOT CONNECT THEM TO THE BOTTOM HUB
(DETAIL B)

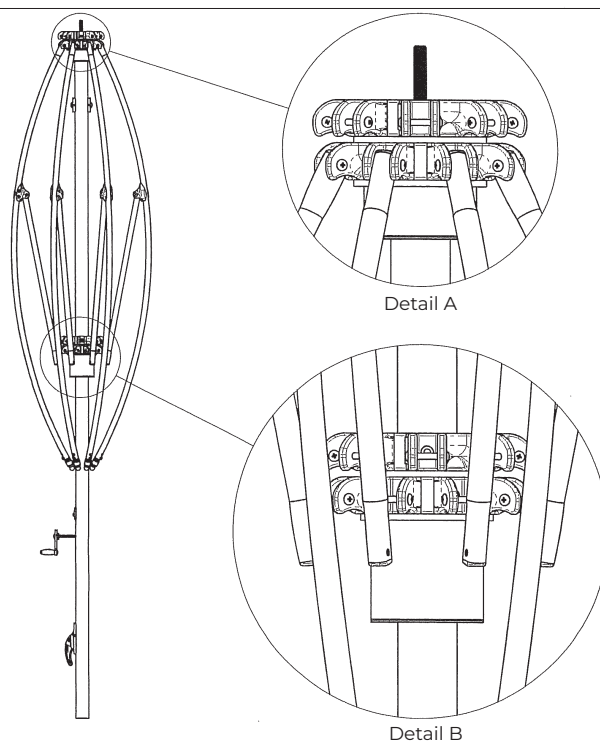


STEP 2:

CONNECT ALL RIBS FROM RIB SET A TO TOP LEVEL ON UPPER HUB.
(DETAIL C)

ALSO CONNECT RIB SET A TO THE TOP LEVEL ON THE BOTTOM HUB
(DETAIL D)


NOTE: DO NOT CONNECT RIB SET B BEFORE CONNECTING ALL RIBS FROM RIB SET A

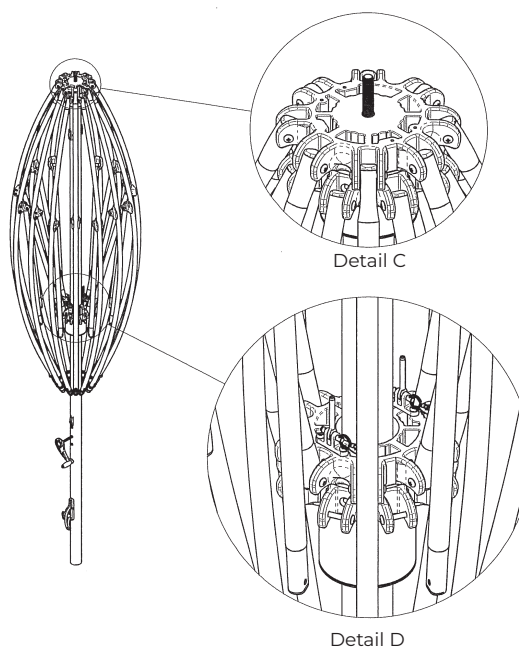

STEP 3:


AFTER CONNECTING ALL RIBS FROM RIB SET A ON THE BOTTOM HUB, PROCEED TO CONNECT ALL RIBS FROM RIB SET B TO LOWER LEVEL OF BOTTOM HUB.

(DETAIL E)

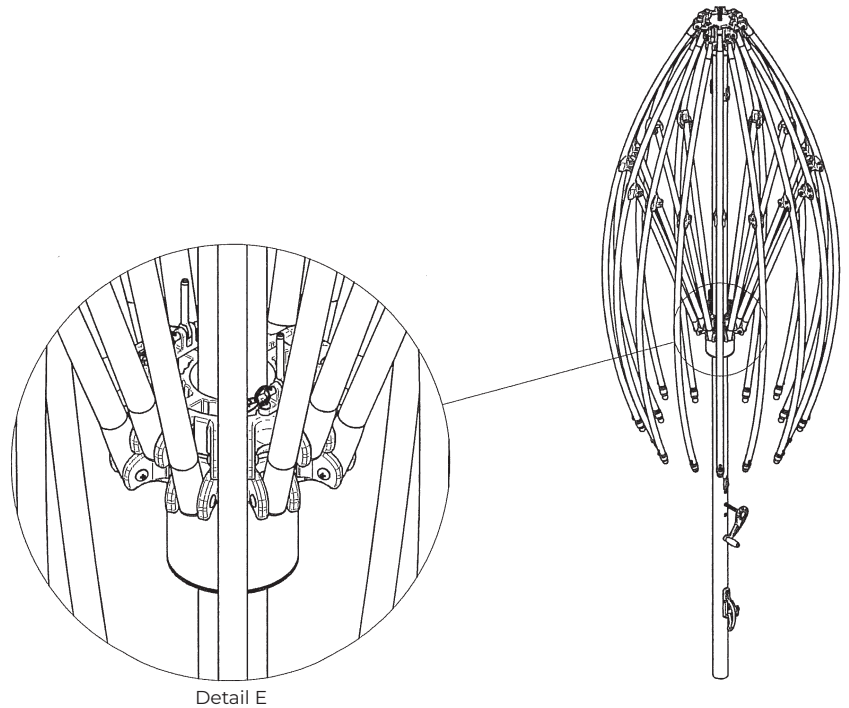


STEP 4: CANOPY INSTALLATION:

CAREFULLY, AND WITH THE ASSISTANCE OF TWO INSTALLERS USING A 10-FT LADDER, PLACE THE CANOPY OVER THE MAST, ALIGNING THE FABRIC OPENING WITH THE SCREW AT THE TOP.

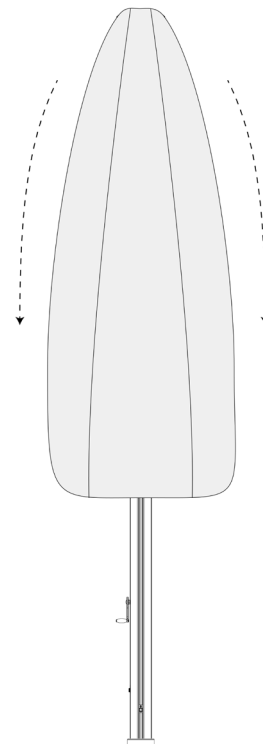


STEP 5:

SECURE THE CANOPY BY HAND-TIGHTENING THE FINIAL ONTO THE TOP OF THE MAST.

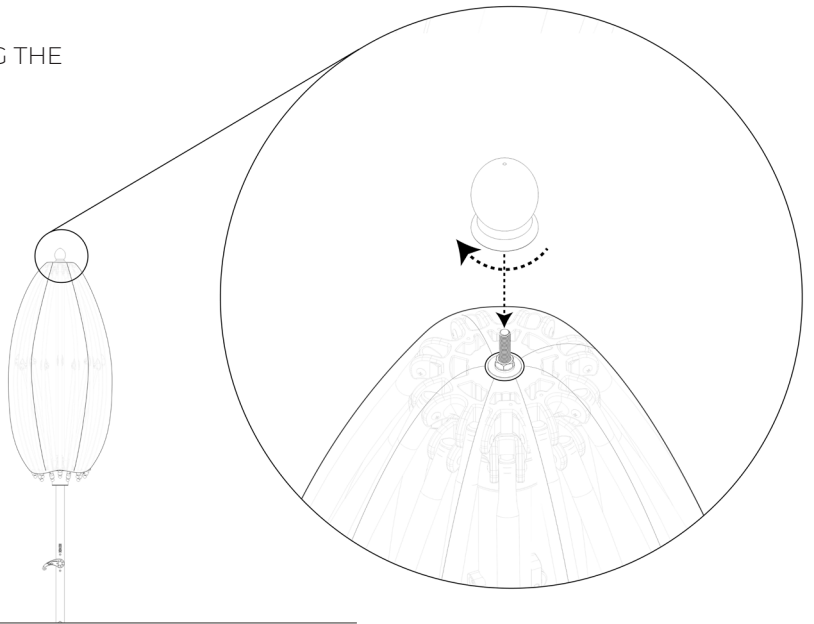**STEP 6:**

SECURE THE CANOPY IN PLACE BY FASTENING A SCREW AT THE END OF EACH RIB.

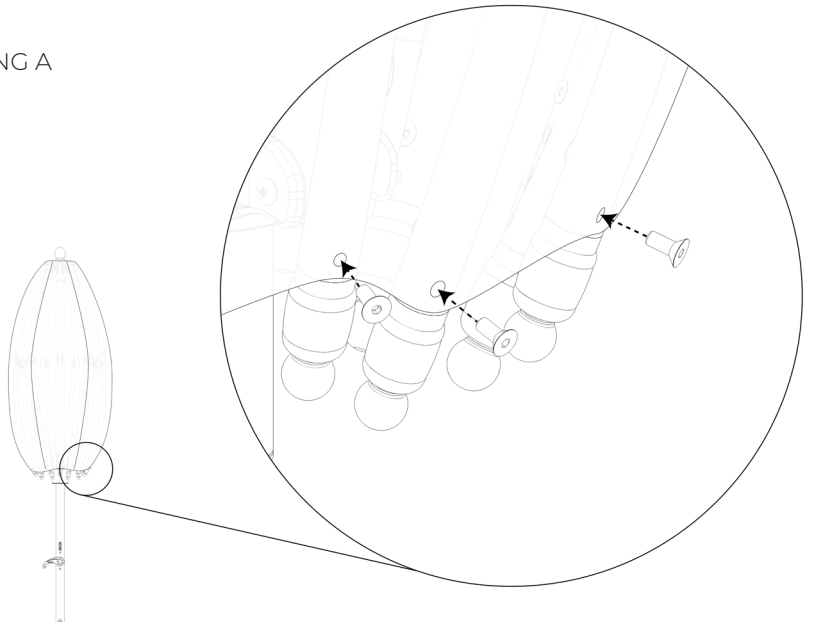**STEP 7:**

PARTIALLY OPEN THE UMBRELLA AND ADJUST ALL THE HOOK AND LOOP FASTENERS ON THE CANOPY AT THE MIDDLE OF EACH RIB.

THIS STEP ENSURES THE CANOPY IS ALIGNED, TIGHTLY SECURED AND DOES NOT FLAP IN THE WIND.

